

GENSET DIESEL ENGINES - STANDARD CONFIGURATION

DESCRIPTION	8031106	8041106	NEF45 AM1	NEF45 SM1 / SM2	NEF45 TM1 / TM2	NEF67 TM2 / TM3	NEF67 TMX2	NEF60 TE2 / TE1	NEF60 TEX2 / TEX1	CURSOR78 TE2	CURSOR87 TEX2 / TEX1	CURSOR13 TE1 TE2 TE3	CURSOR10 TEX1	CURSOR13 TEX1 / TEX2	VECTOR08 TE2
Rigid mountings	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Flywheel	11 1/2	11 1/2	11 1/2	11 1/2	11 1/2	11 1/2	11 1/2	11.5	14	14	14	14	14	14	14
Flyweel housing SAE	3	3	3	3	3	3	3	3	1	1	1	1	1	1	1
HWT - LOP Alarm senders	STD	STD	STD	STD	STD	STD	STD	ECU	ECU	ECU	ECU	ECU	ECU	ECU	ECU
Oil drain pump	OPT	OPT													
Starting motor	12 V	12 V	12 V	12 V	12 V	12 V	12 V	24 V	24 V	24 V	24 V	24 V	24 V	24 V	24 V
Charging battery alternator	12 V	12 V	12 V	12 V	12 V	12 V	12 V	24 V	24 V	24 V	24 V	24 V	24 V	24 V	24 V
Mechanical Governor	STD	STD	STD	STD	STD	STD	STD								
Electronic governor	OPT	OPT	OPT	OPT	OPT	OPT	OPT	ECU	ECU	ECU	ECU	ECU	ECU	ECU	ECU
Speed control (loose)	OPT	OPT	OPT	OPT	OPT	OPT	OPT	ECU	ECU	ECU	ECU	ECU	ECU	ECU	ECU
Air cleaner (installed)	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Oil filter	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Fuel filter	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Pusher fan (installed)	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Fan Guard (installed)	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Radiator (mounted)	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD
Technical documentation	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD	STD